


1. MOUNT POSTS
2. ASSEMBLE RAIL IN-FILL SECTION (SUBRAIL, SPINDLES, BOTTOM RAIL & BOTTOM RAIL STIFFENER, MAKING SURE TO MATCH THE WIDTH OF THE SECTION WITH THE DISTANCE BETWEEN POSTS)
3. FASTEN TOP RAIL TO POSTS. PLUG COUNTERBORED HOLES, IF DESIRED
4. MOUNT IN-FILL SECTION BETWEEN POSTS BY LAGGING THROUGH OUTSIDE SPINDLES INTO POSTS
5. FASTEN SUBRAIL TO TOP RAIL FROM BELOW

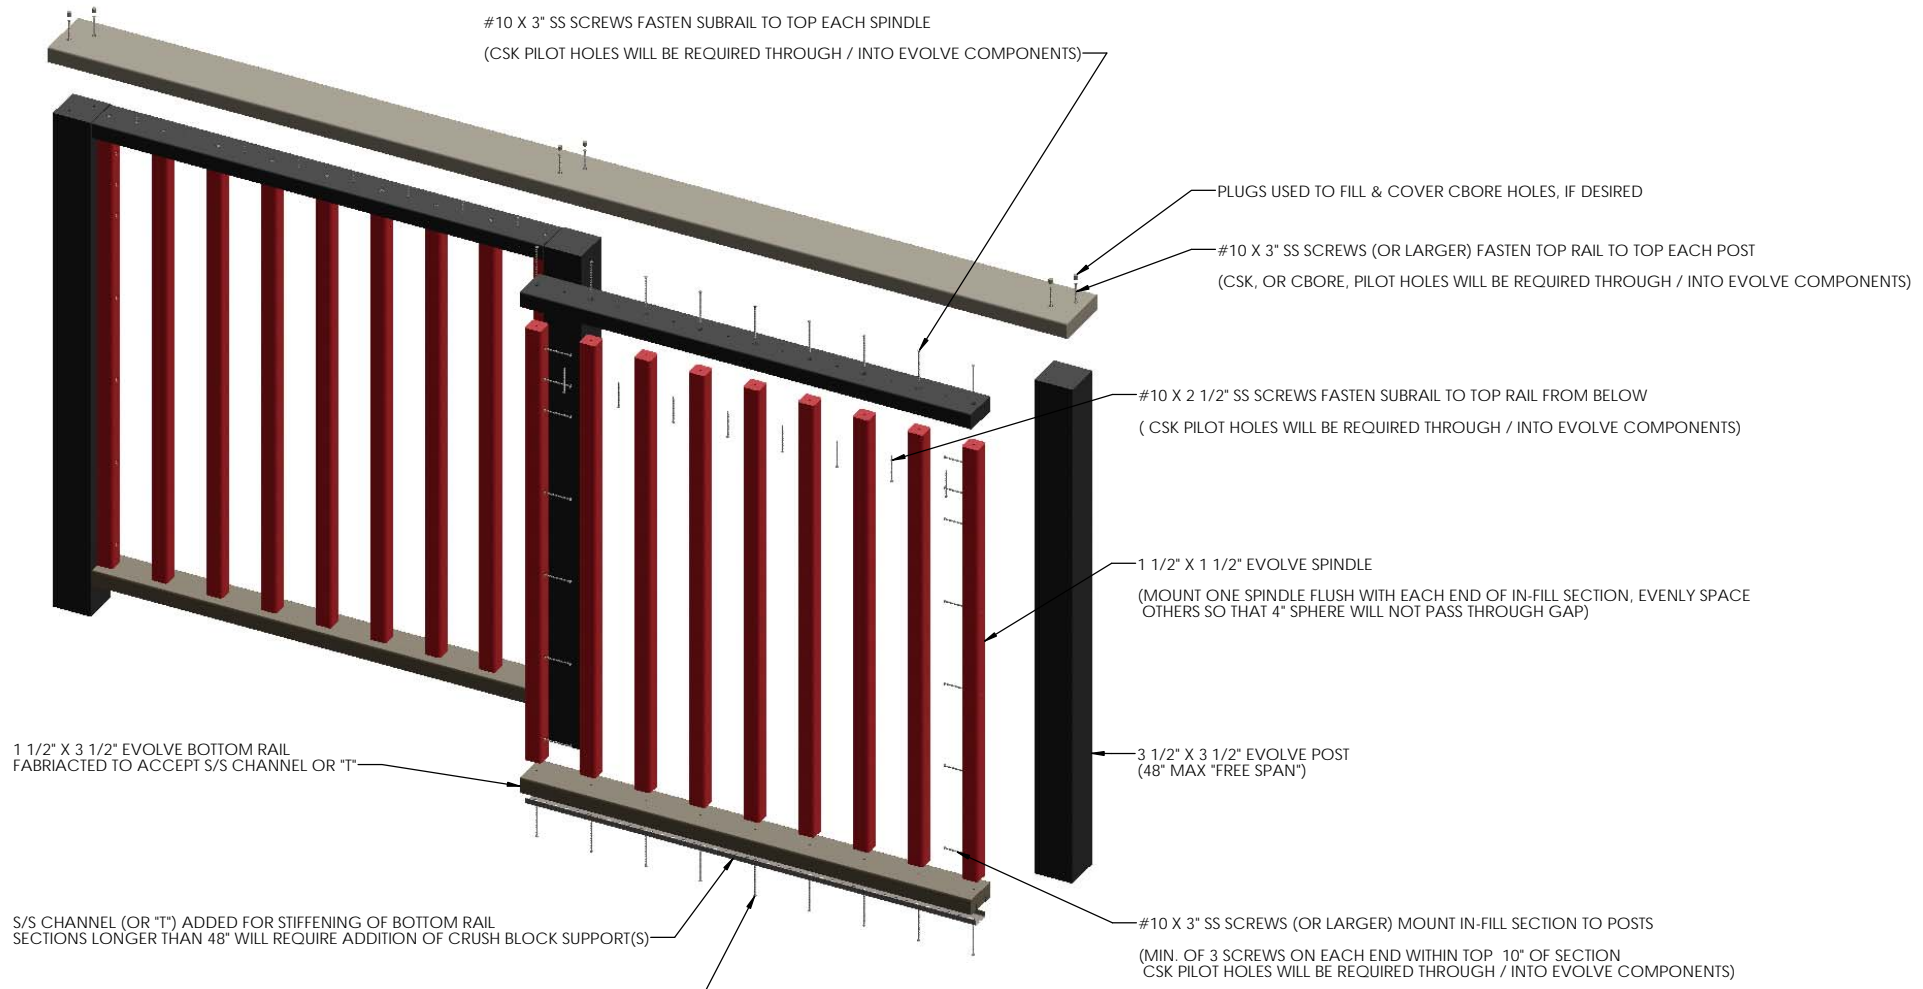

UNLESS OTHERWISE SPECIFIED:		NAME	DATE
DIMENSIONS ARE IN INCHES		CJN	5/6/2014
TOLERANCES:			
FRACTIONAL: ±			
ANGULAR: MACH ± BEND ±			
TWO PLACE DECIMAL: ±			
THREE PLACE DECIMAL: ±			
MATERIAL:		D.A.	
FINISH:		COMMENTS:	
DO NOT SCALE DRAWING			

TITLE:	
Rail Assembly Illustration	
SIZE	DWG. NO.
C	
SCALE: 1:8	WEIGHT:
	SHEET 1 OF 1